Save Programs

PC Poll V7 Eile <u>T</u> ools <u>H</u> elp						۵×
Program	Machine Table		Machine Count 16 Satellite Count 1			_
Polling	Detail Comm	Programs RJE Timing]			
🎯 Machine List	Machine ID	Sharp 810	Store	Sharp, 1	•	
Sharp 3500 🔺	Program ID	sharp_810	Comm Type	TCP/IP		
Sharp 600	- Machine #	1		, Number of Satelli	tes None Allocated	
Sharp 700						
Sharp 700 test	Mfg	Sharp 🔽	ROM Version	1.00.3	V	
Sharp 810	Model	810F	Baud Rate	96		
Tec 1595	IA 44 A P	→ → + - ~ >	< 🛷 🖗 🛛 🐇	📴 🗳 🐴	Search	
Tee 1650	* MachineId	ProgramId	StoreNum Mach	nineN		
🔀 Communications	Sam 7000	sam_7000	11	30		
🔗 Maintain	Sharp 3500	sharp_3500	1	1		
a i	Sharp 600	sharp600	39	35		
📃 👽 Setup	Sharp 700 tes	sharp_700	11	31		
Preferences	Sharp 810	sharp 810	1	1		
	Tec 1595	tec_1595	39	1		
Most Recent	Tec 1650	tec_1650	1	1		
Machine ID: Sharp 81	0	Program ID: sharp_8	310	🗐 Close	👖 Exit 🛛 📍 <u>H</u> elj	p

1. To save programs from a register in the Version 7 Polling software, select **Machine List** from the menu on the left. Click on the appropriate register, in this case the **Sharp 810**.



2. From the left menu select **Communications**, and then **Communicate**.



3. Select the register in the list of machines/Programs in Figure A by clicking on the plus sign [±] in front of the register. All possible programs that can be saved for that register will be shown.

Note: Some programs are not automatically selected by the **All Programs** option. Specific programs have been excluded as edits to them can change general communications settings. Please consult a cash register dealer for more information on those programs and how edits to them will affect the cash registers.

- A few programs can be checked off one at a time or All Programs can be checked and all programs in the list will be checked off automatically for the chosen register as shown above in Figure B. Repeat for additional machines if desires.
- 5. When done click the **Begin** button at the bottom left of the screen.
- 6. The **Help** button brings up the V7 help files.



- 7. The **Clear All** button will uncheck any checked-off items. After clicking on the **Clear All** button, all registers and programs are deselected.
- 8. For more information on saving programs, see Communications Area in the Help Files.